

INSTALLATION INSTRUCTIONS

IMPORTANT SAFEGUARDS



When using electrical equipment, basic safety precautions should always be followed including the following:

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

1. To avoid the possibility of electrical shock, turn off power supply before installation or servicing.
2. Product must be installed in accordance with NEC or your local electrical code. If you are not familiar with these codes and requirements, consult a qualified electrician.
3. For use with Fixed arm or Adjustable arm mount LED fixtures.

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

TO INSTALL:

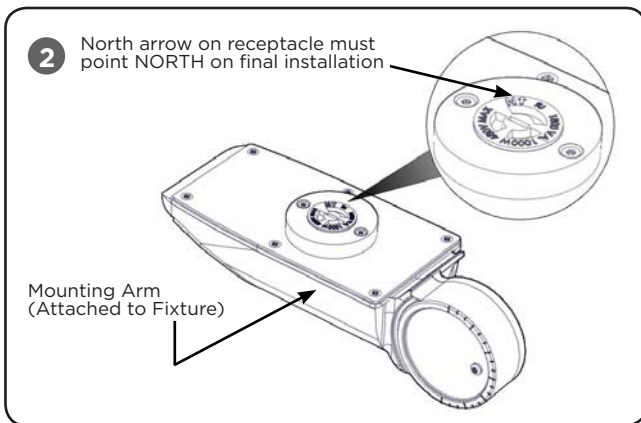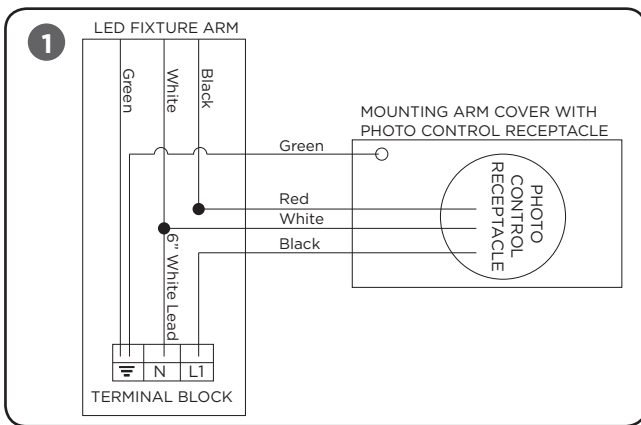

XA-NEMA* INSTALLATION/WIRING

STEP 1:

Remove existing Mounting Arm Cover from the LED fixture.

STEP 2:

Remove ground wire that is located between Mounting Arm Cover and fixture by removing it from the terminal block in the fixture mounting arm.

STEP 3:

Wire the Mounting Arm Cover with Photo Control Receptacle from the XA-NEMA* kit as follows (**show in Figure 1**):

- a. Connect ground (green) wire from new mounting arm cover to the terminal block.
- b. Connect black wire from Photo Control Receptacle into terminal block.
- c. Connect the red wire from the Photo Control Receptacle to the black wire(s) from the fixture using included lever nut.
- d. Connect white wire from Photo Control Receptacle to white wire(s) from fixture and 6" white lead included in the kit with provided lever nut. Insert the other end of the 6" white wire into the terminal block.

STEP 4:

Secure Mounting Arm Cover with Photo Control Receptacle to fixture arm with included screws

(Figure 2).

NOTE: This fixture is supplied with a surge suppressor, do not disconnect during the installation process.

STEP 5:

North arrow on receptacle must point north on final installation. If necessary, loosen receptacle screws (do not remove) and rotate the center of the receptacle with a flat blade screw driver so that the north arrow points north.